


# Barcelona Modern Adirondack Chair


## PART GUIDE

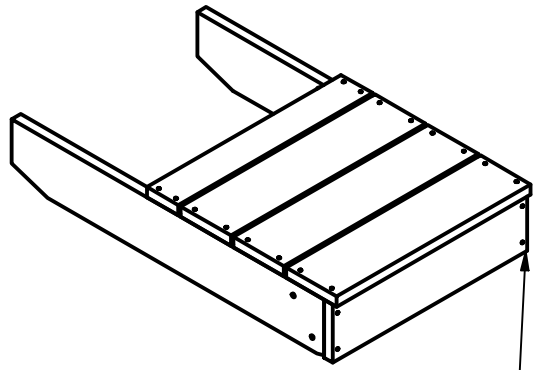

AD-CHRAD01-ASM-004 SEAT ASSEMBLY

AD-CHRAD01-005-ARM SUPPORT- LEFT

AD-CHRAD01-007-BACK SLAT

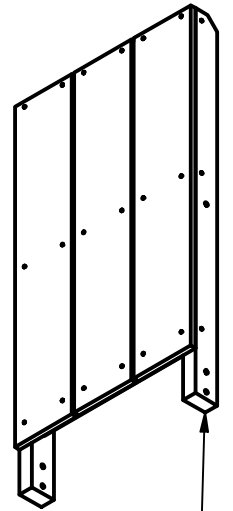

AD-CHRAD01-ASM-001 BACK ASSEMBLY


AD-CHRAD01-003-FRONT LEG- RIGHT

AD-CHRAD01-002-BACK SEAT SLAT

AD-CHRAD01-009-BACK SUPPORT


AD-CHRAD01-010-ARM

AD-CHRAD01-004-FRONT LEG- LEFT

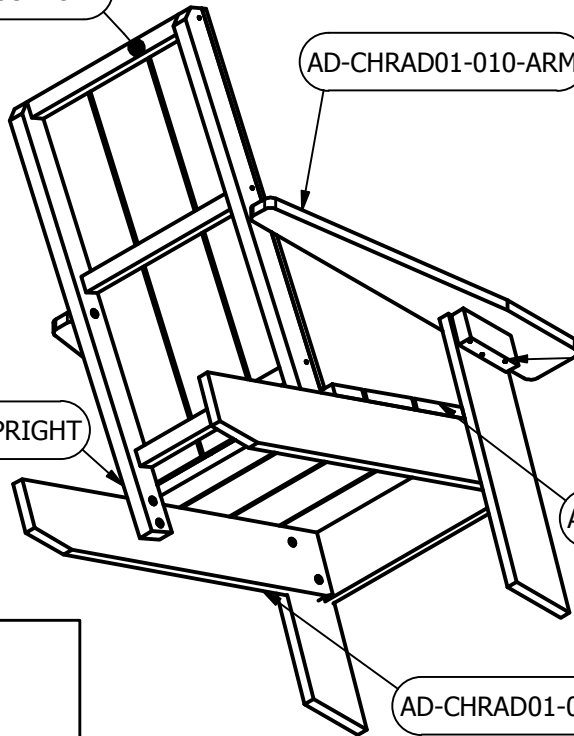

AD-CHRAD01-011-SEAT SUPPORT- RIGHT

AD-CHRAD01-006-ARM SUPPORT- RIGHT

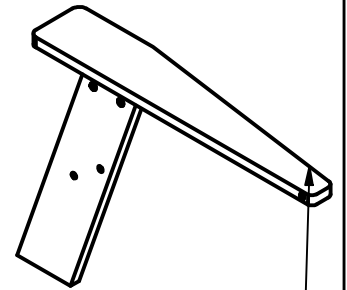


AD-CHRAD01-ASM-002 ARM ASSEMBLY- RIGHT

AD-CHRAD01-008-BACK UPRIGHT

AD-CHRAD01-001-SEAT SLAT

AD-CHRAD01-ASM-003 ARM ASSEMBLY- LEFT

AD-CHRAD01-012-SEAT SUPPORT- LEFT

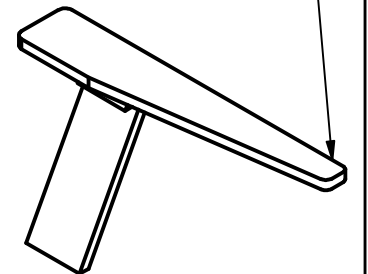

AD-CHRAD01  
03.15.19

**highwood**<sup>®</sup>  
NATURE'S CLOSEST RIVAL

For information on Care and Cleaning or to register your *highwood*<sup>®</sup> product, please visit [www.highwood-usa.com](http://www.highwood-usa.com).