
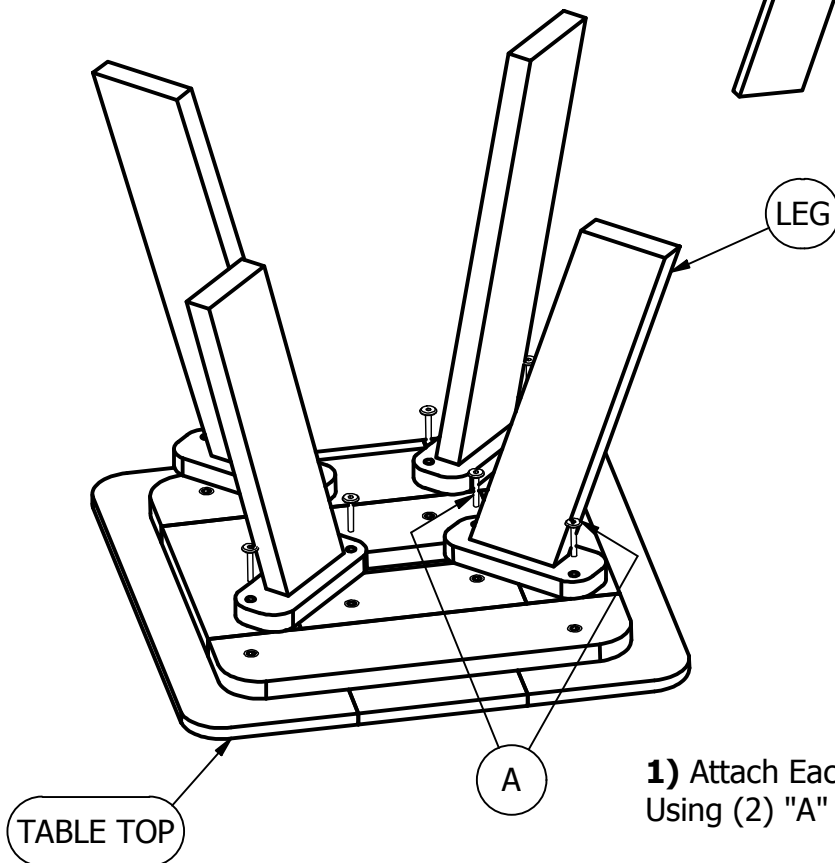



Adirondack Collection

Barcelona Modern Side Table

Assembly Guide

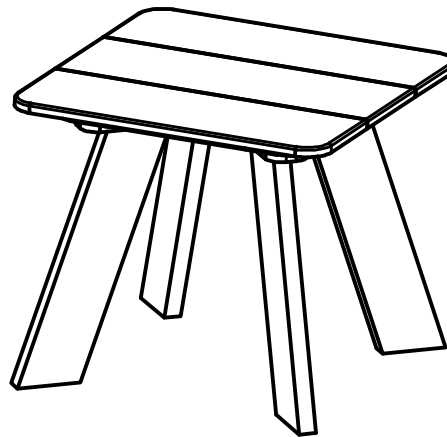

HARDWARE

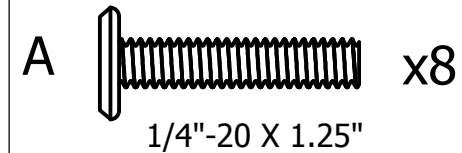

IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started. Once all bolts are inserted, go back & tighten all the bolts.

Retain these instructions for future reference

INCLUDED TOOLS

